

SUBJECT	PAGE NO.
3.1 Specifications	3-1
Manufacturing Tolerances	3-1
3.2 Service Wear Limits	3-3
3.3 General Information	3-5
3.4 How To Use This Section	3-14
3.5 Stripping Motorcycle For Service	3-16
3.6 Assembling Motorcycle After Stripping	3-18
3.7 Removing Engine From Chassis	3-21
3.8 Installing Engine In Chassis	3-26
3.9 Top End Overhaul	3-33
Disassembly	3-33
Assembly	3-37
3.10 Bottom End Overhaul	3-45
Disassembly	3-45
Assembly	3-47
3.11 Subassembly Service And Repair	3-55
Breather Assembly	3-55
Rocker Arm Assembly	3-56
Push Rods/Lifters/Covers	3-59
Cylinder Head	3-63
Cylinder	3-74
Piston	3-77
Upper Connecting Rod	3-82
Cam Support Plate	3-87
Oil Pump	3-99
Crankcase	3-101
Flywheel/Connecting Rod Assembly	3-108

